
How to Remove the Front Cover of 3000U Printer

Step 1: Power off printer and remove the black rubber belt which fixed on the frame of printer.

Step 2: Remove the three screws as picture shows.

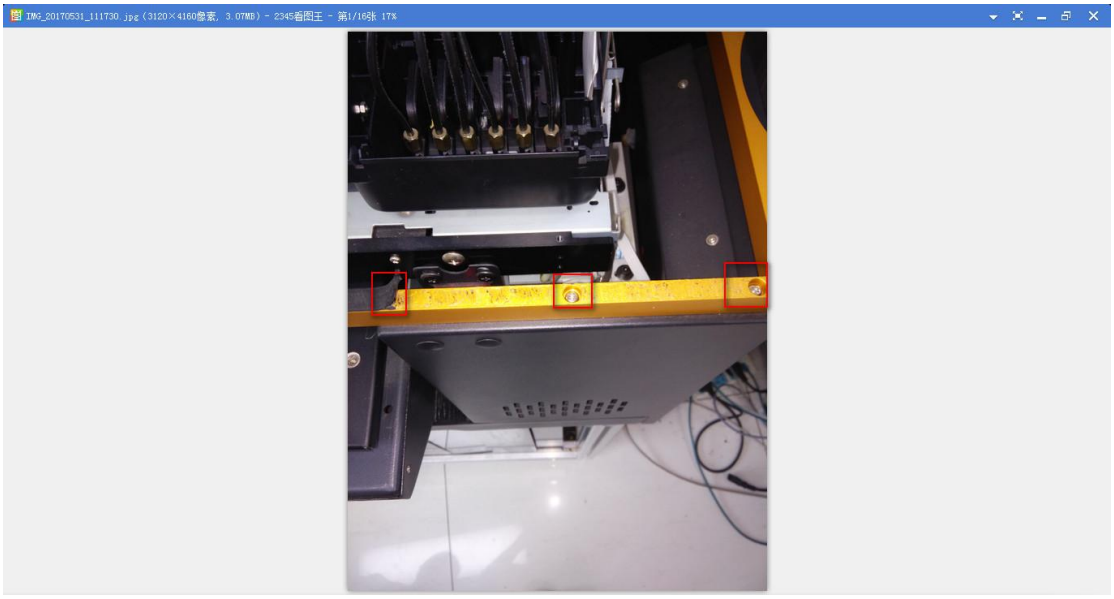


Step3-1: Remove the front cover with fans.




Step3-2: Remove the front cover with fans.




Step 4: Remove the two screws at the bottom of left-side infrared sensor.

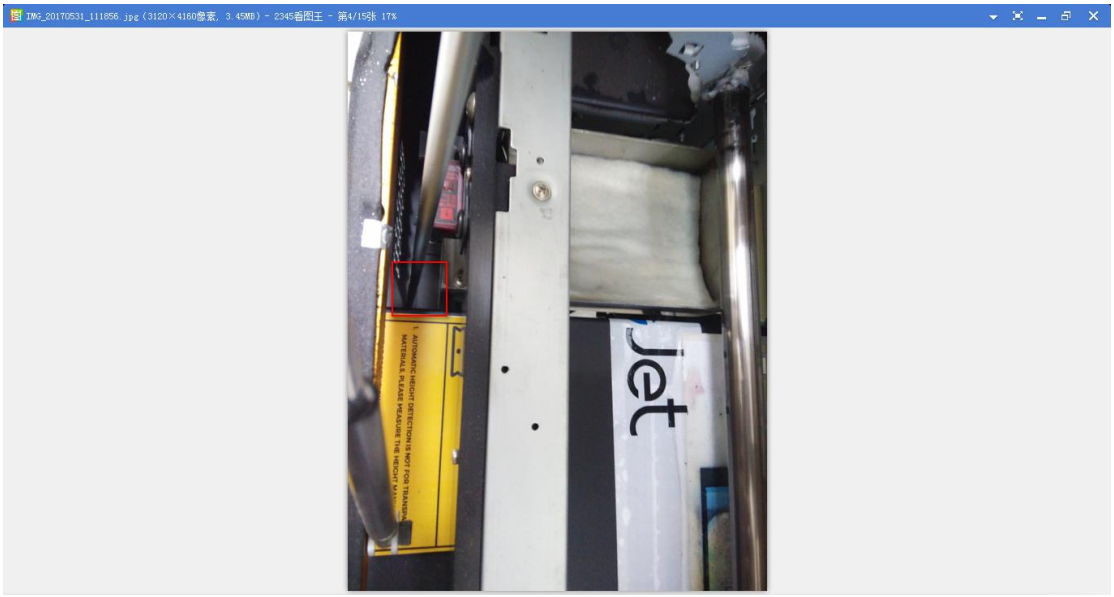


Step 5: Remove the two screws at the bottom of left-side infrared sensor.

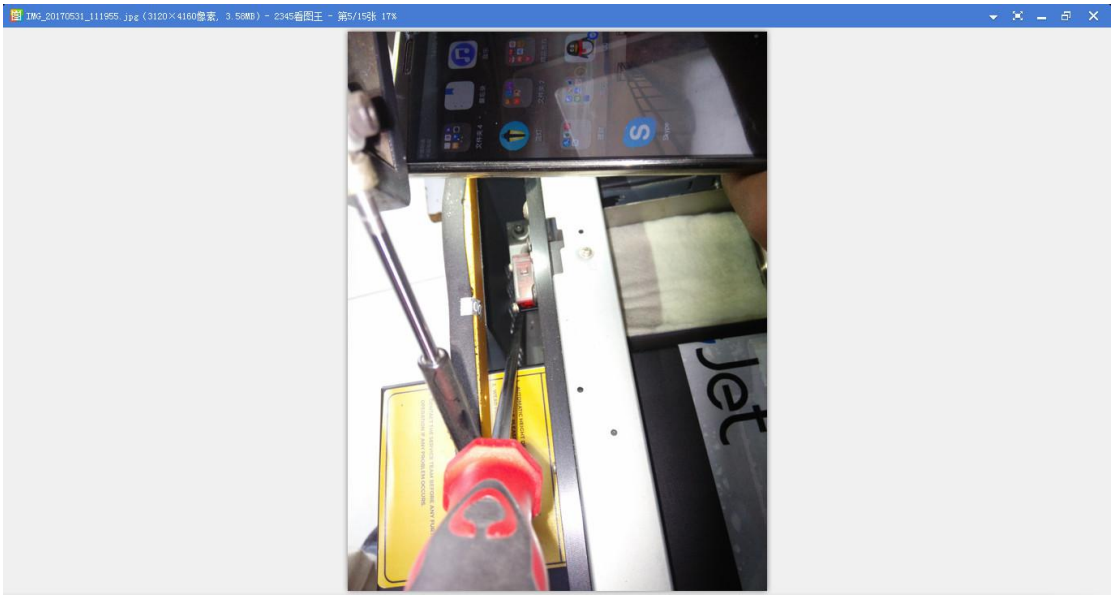

Step 6:

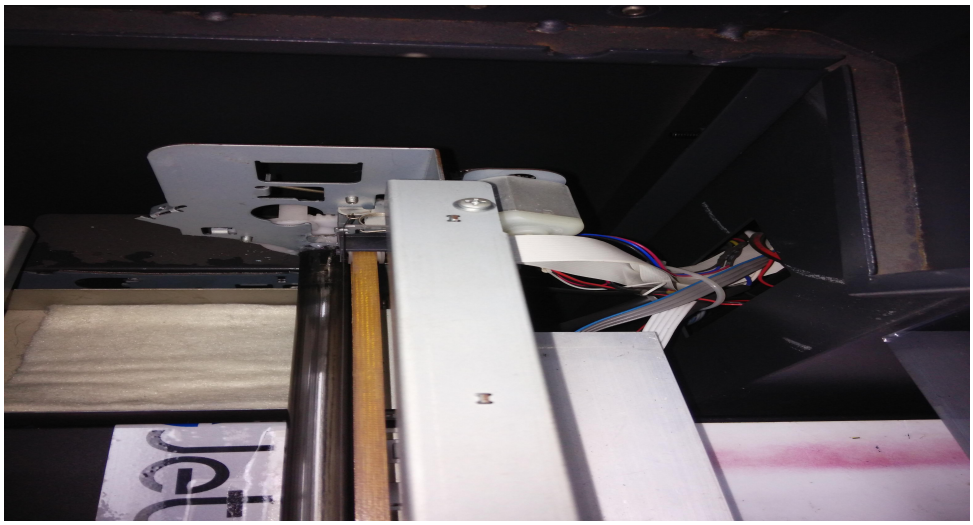

Step 6-1:

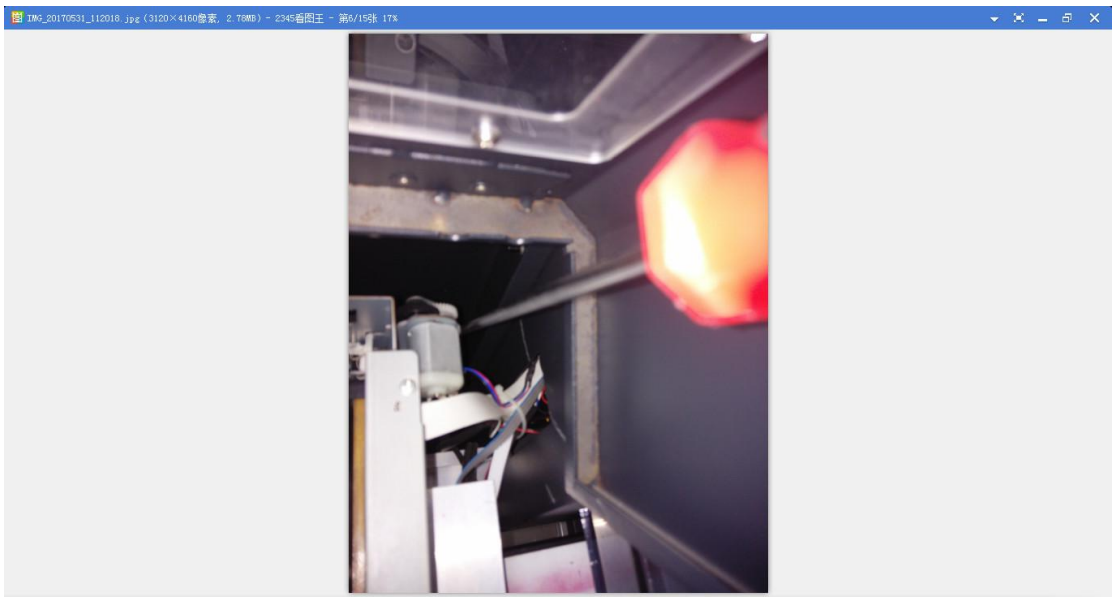


Step 6-2:




Step 7: Open the slide cover at left side of printer.(Mainbord, SCM board)




Step 7-1: Remove the screw at the top of transfer board.

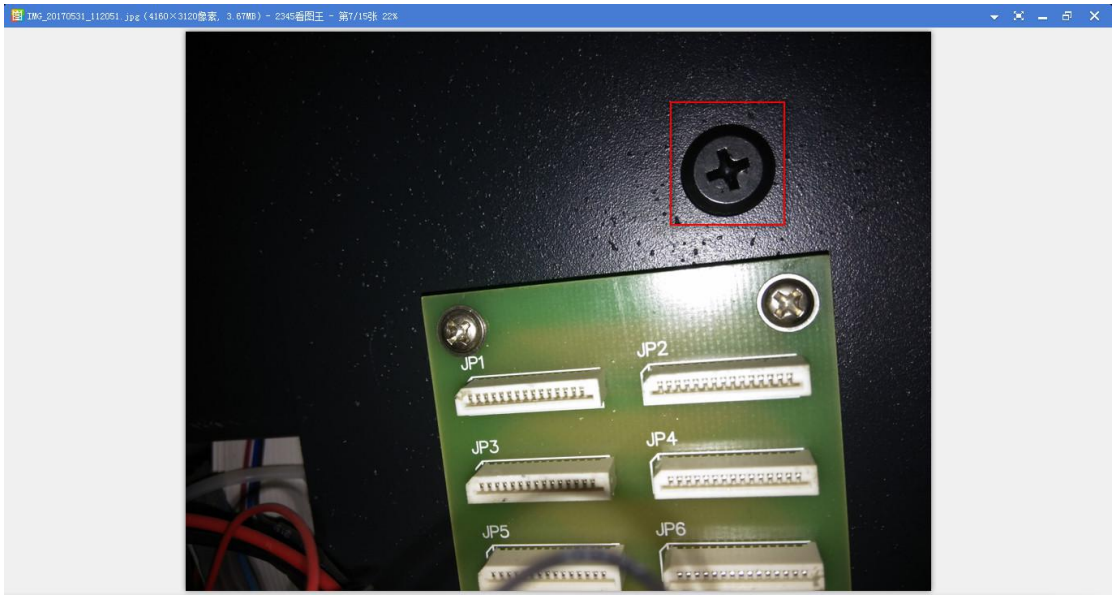

Step 7-2: Remove the screw at the bottom of transfer board.

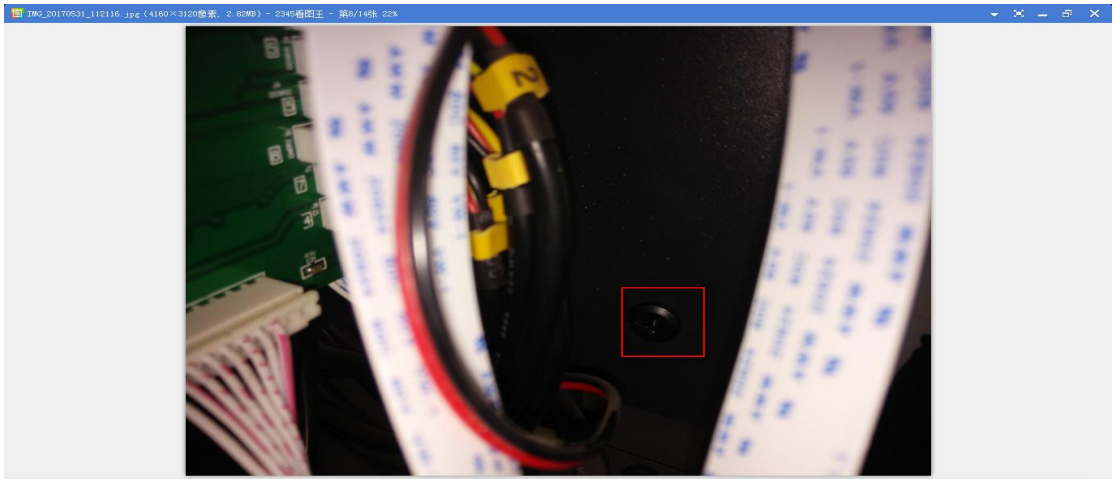

Step 8: Remove the two screws at right side of printer(Control Panel side)

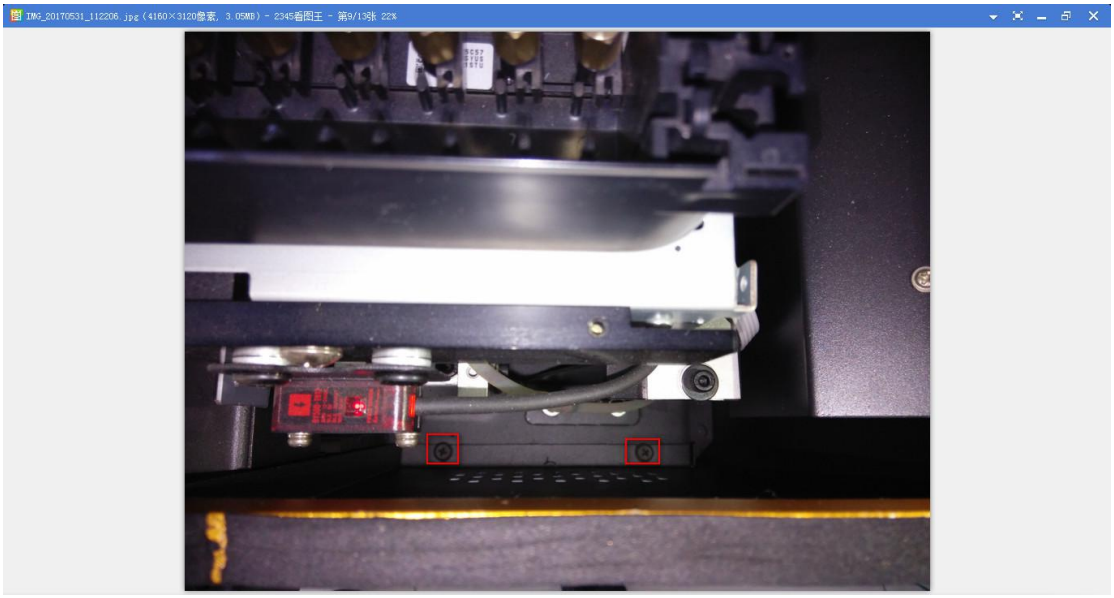

Step 9-1: Open the slide cover at right side of printer(ink bottles).



Step9-2:

